




# Toshiba Satellite A65-S126 Optical Drive Replacement

Replace a broken optical drive on a Toshiba A65-S126.

Written By: Geoff Wacker

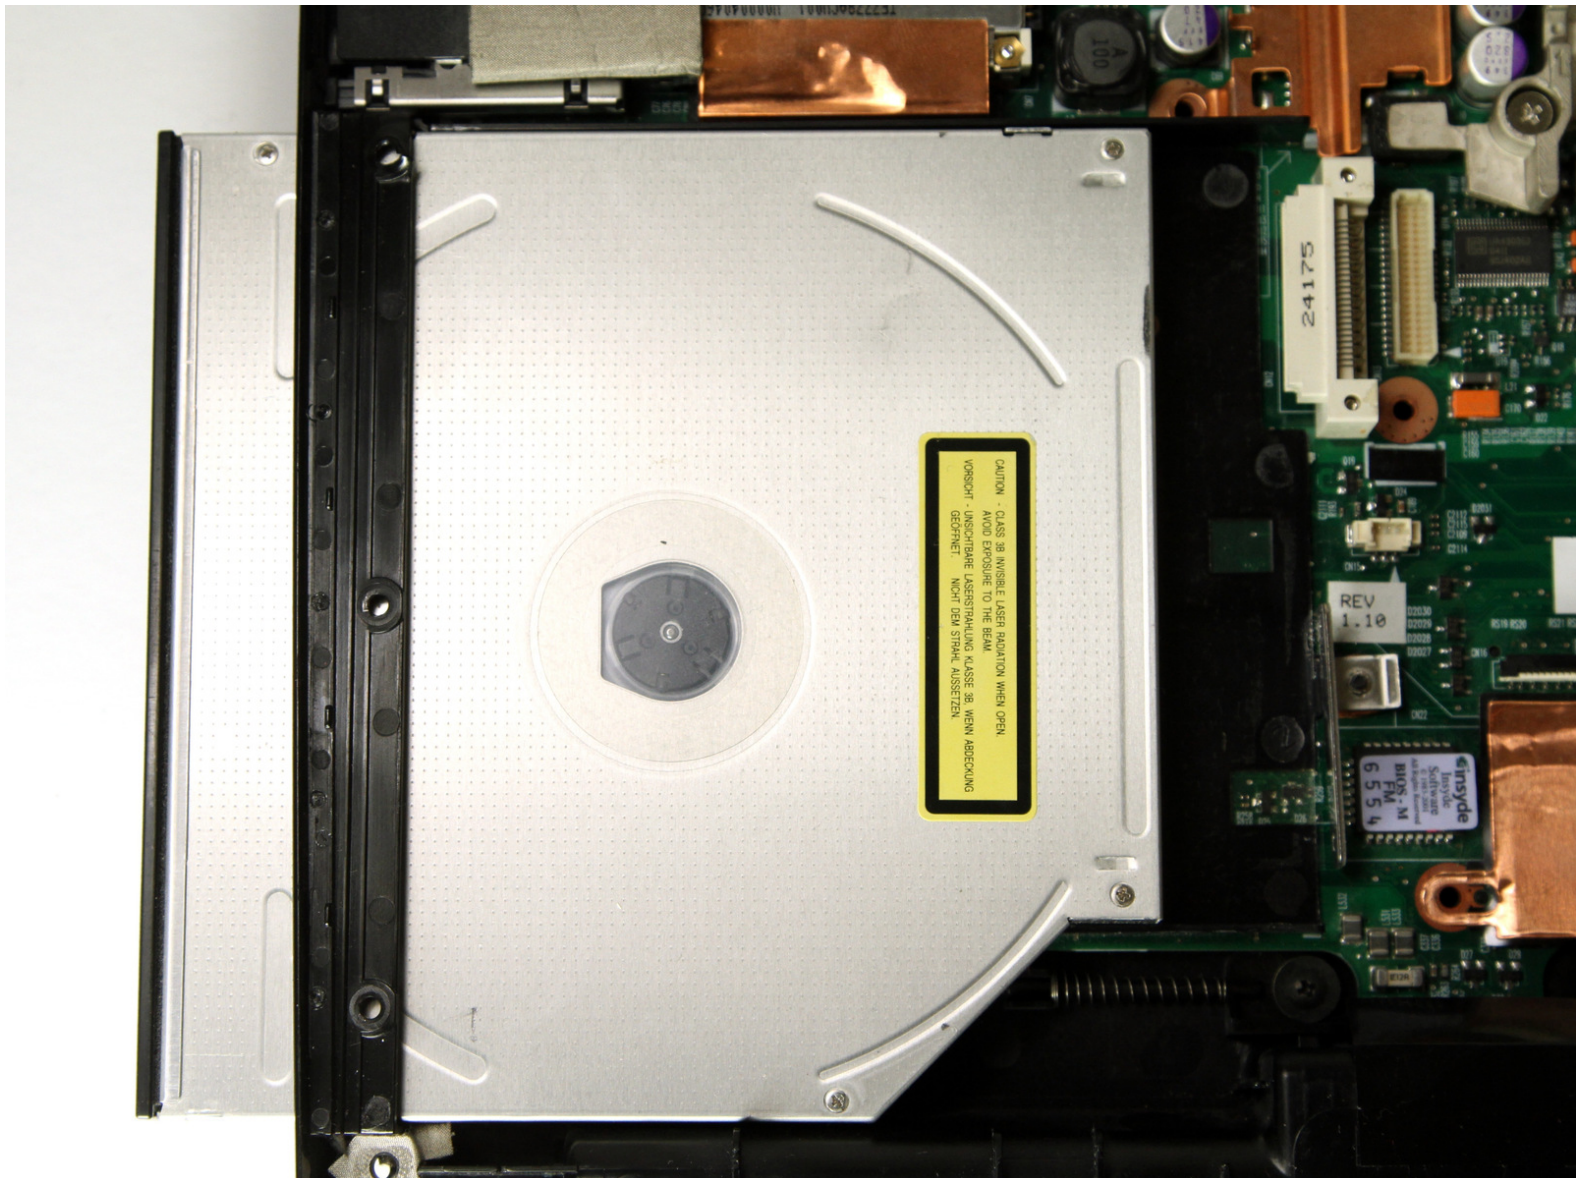

## INTRODUCTION

This guide provides step by step instructions of how to replace a faulty optical drive.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Flip the laptop over so the bottom is facing up.
- Slide each of the three tabs on the bottom half of the assembly into the unlocked position.

## Step 2



- Gently lift the battery out of the computer.



## Step 3 — Upper Assembly



- Remove the single 3mm Phillips #00 screw that secures the wireless card cover.

## Step 4




- Remove the WIFI module cover. It will pull right off.

## Step 5



- Unplug the white and black wires from the WiFi module.

## Step 6

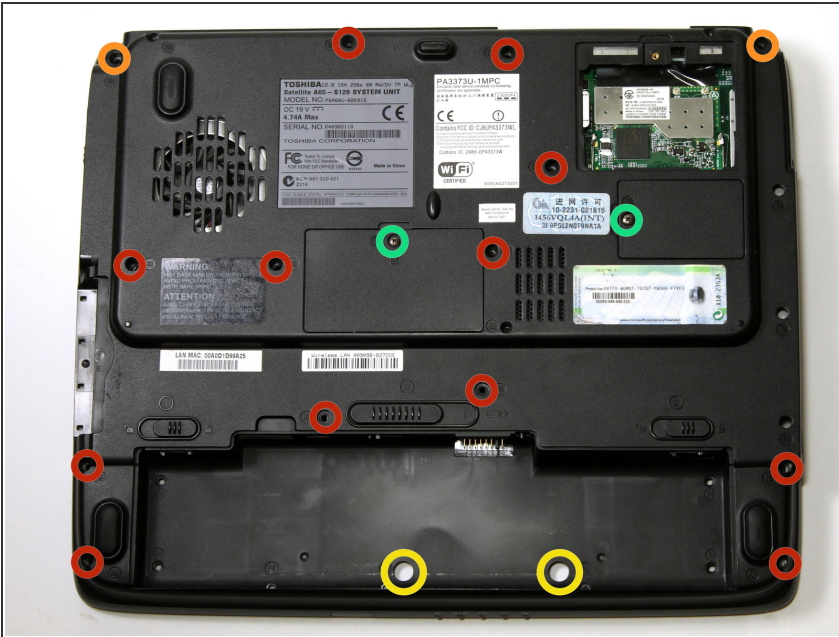

- Remove the twelve 8mm button head Phillips #00 B8 screws.
- Remove the two 14 mm button head Phillips #00 B14 screws.
- Remove the two 10 mm Phillips #00 battery compartment screws.
- Remove the two 8 mm Phillips #00 screws.



## Step 7




- Remove the seven 4mm flat Phillips #00 screws.
- Remove the seven 20mm button head Phillips #00 screws.

## Step 8




- Use the plastic opening tool to pry the two halves apart.

## Step 9 — Optical Drive

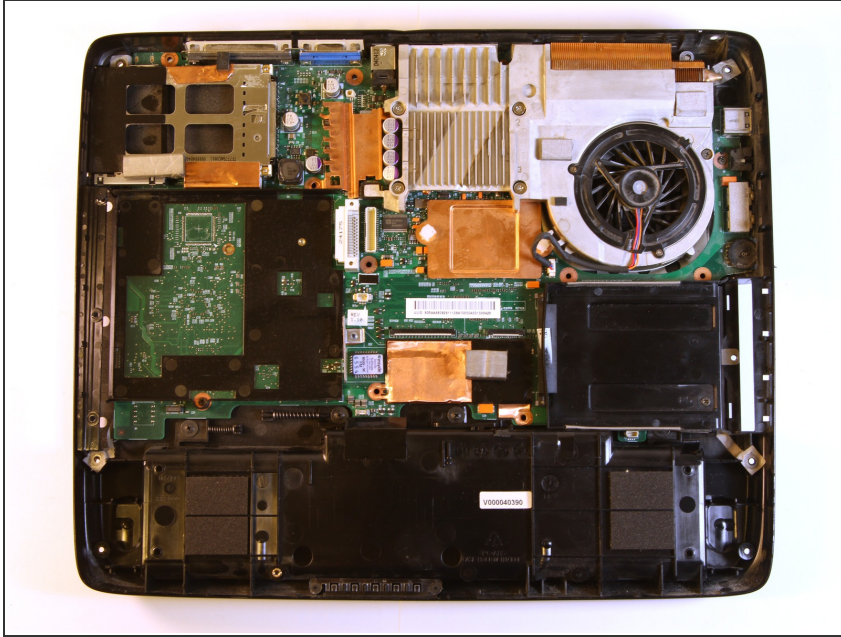

- Orient the bottom assembly as displayed.


## Step 10

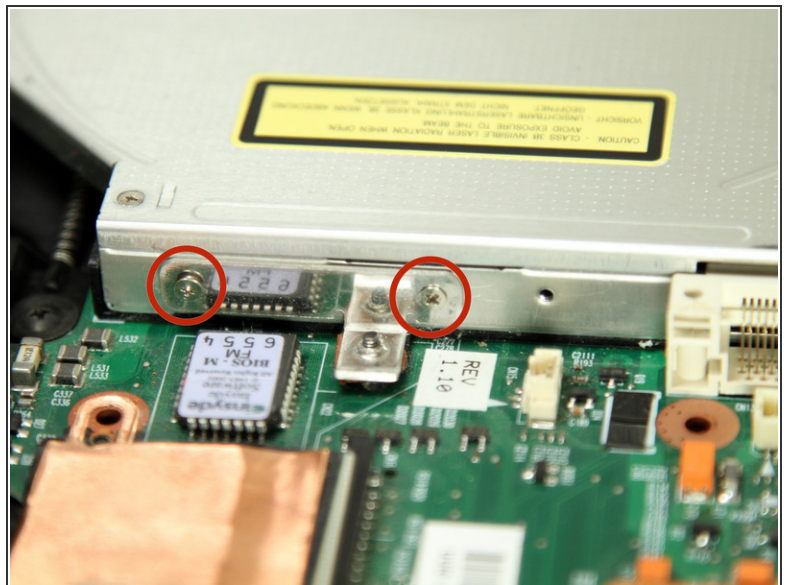

- Remove the two 3 mm Phillips #00 screws.



## Step 11

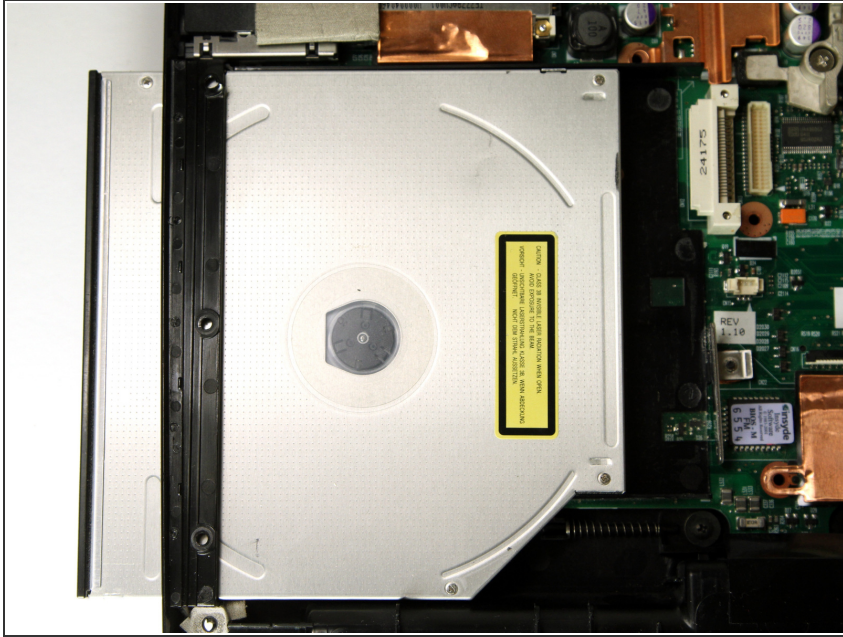

- Slide the optical drive out of the laptop through the opening on the left side of the bottom assembly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 12:56:35 AM.